



"Configuration of the AKM-RSM-100 which was set up" is the following.


■ Direct Connection (DTE-DCE connection) \*Note: CABLE-A is used.

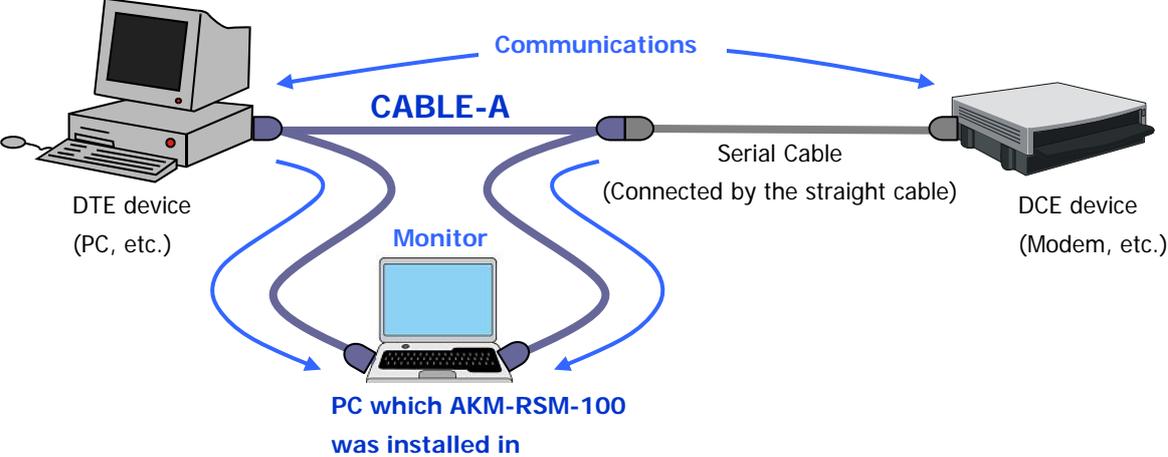


■ Direct Connection (DTE-DCE connection) \*Note: CABLE-A is used.

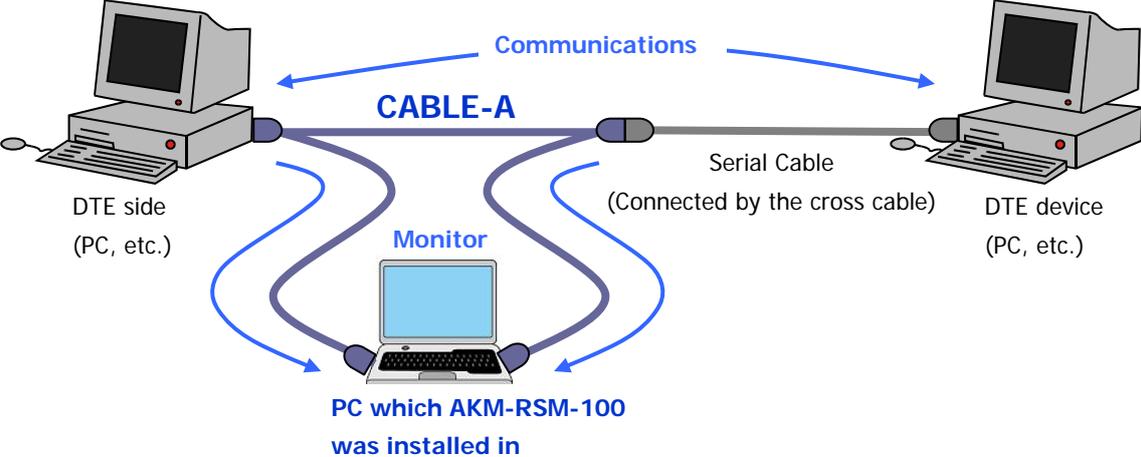

■ Relay Connection (DTE-DCE connection) \*Note: CABLE-B is used.

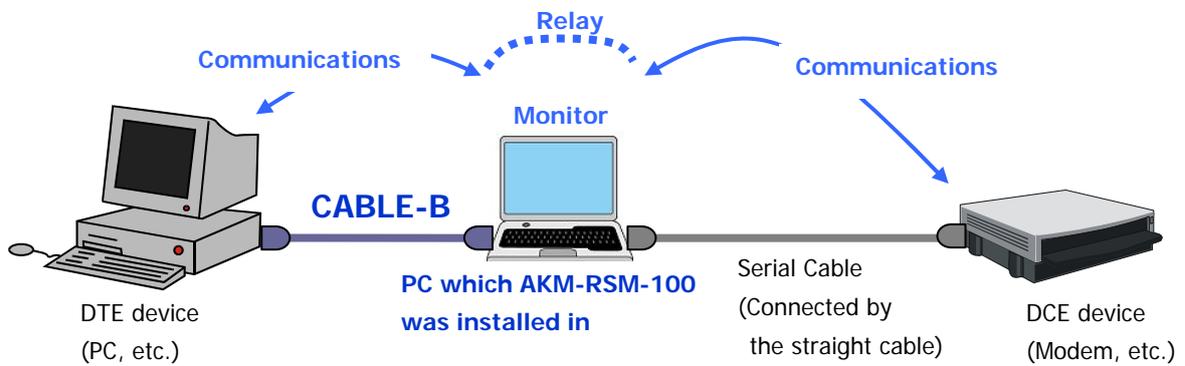

■ Relay Connection (DTE-DTE connection) \*Note: CABLE-B is used.

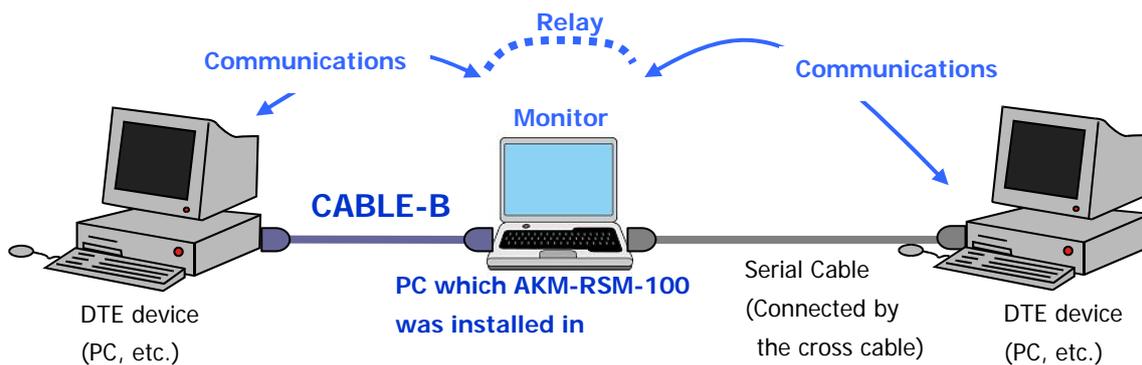

(Note) The "Relay Connection" is used for the Support of Debugging to do the increase in efficiency of software development and to do the support of the trouble solution of the DTE device side and the DCE device side, too.

Then, there is the difference in the concrete connection method by each function and by the option setting of each function.