




DDS Module Software control flow

INITIALIZE / POWER ON RESET

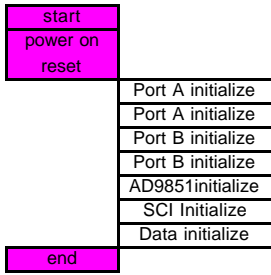


Main routine

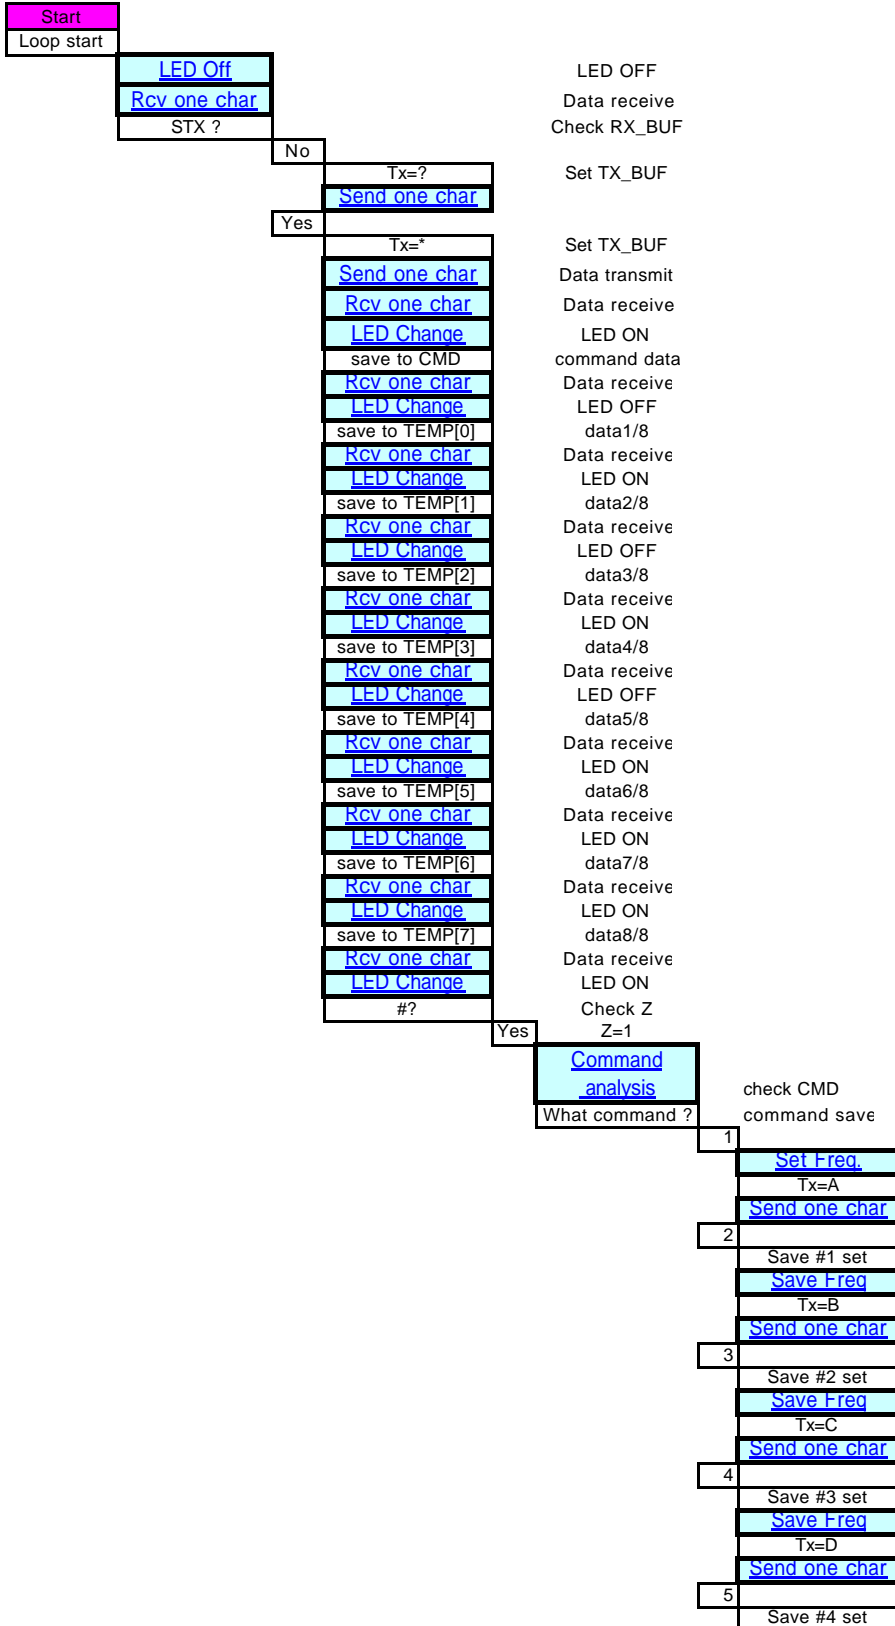

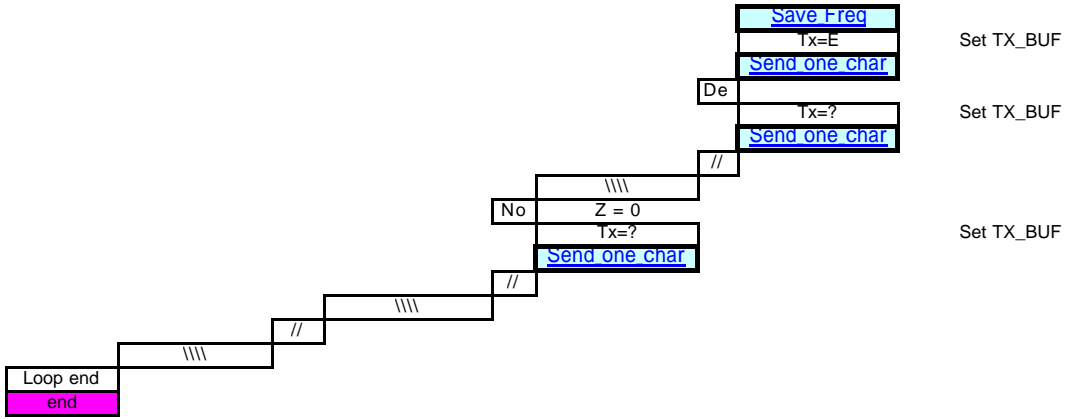


Receive Character

 


[GOTO Main Routine](#)

 
Transmit Character



LED Off

 


LED Change

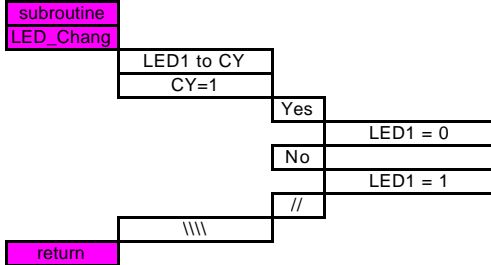


[GOTO Main Routine](#)

 Command analysis




[GOTO Main Routine](#)


Set_Freq.

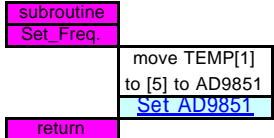

Set_AD9851

 

Save_Freq

 

[GOTO Main Routine](#)